
The sensitivity of an optical receiver mainly includes

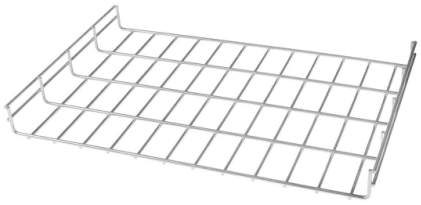

Overview

Sensitivity in a receiver, such a, indicates its capability to extract information from a weak signal, quantified as the lowest signal level that can be useful. It is mathematically defined as the minimum input signal required to produce a specified signal-to-noise S/N ratio at the output port of the receiver and is defined as the mean noise power at the input port of the receiver times the minimum required signal-to-noise ratio at the output of the receiver:.

Key Takeaways

Optical receiver sensitivity typically ranges from about -28 dBm to -10 dBm depending on data rate, modulation format, and system type.

Definition and Measurement

Receiver sensitivity is the minimum optical power required at the receiver input to achieve a specified bit error rate (BER), often 10-9 to 10-12 for digital systems. It is usually expressed in dBm and indicates how well a receiver can detect weak optical signals. Higher sensitivity (more negative dBm values) allows longer transmission distances and lower transmitter power requirements.

Sensitivity is influenced by photodetector type, transimpedance amplifier design, noise sources, and modulation format.



© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Typical Sensitivity Values

Gigabit Ethernet (1 Gbps): around -28 dBm to -24 dBm for single-mode fiber at a BER of 10^-12. 10 Gbps Ethernet: typically -18 dBm to -14 dBm depending on modulation and fiber type. 25–100 Gbps systems: sensitivities are generally -10 dBm to -16 dBm, with coherent detection often improving sensitivity compared to direct detection.

Free-space optical (FSO) links: sensitivity can vary widely due to atmospheric conditions, typically -20 dBm to -10 dBm for binary modulation formats.

Factors Affecting Sensitivity

Bit Error Rate (BER) Target: Lower BER requirements demand higher sensitivity. Modulation Format: Advanced formats like PAM4 or coherent QPSK may require higher optical power for the same BER. Noise Sources: Thermal noise, shot noise, and amplifier noise degrade sensitivity.

Data Rate: Higher data rates generally reduce sensitivity due to increased bandwidth requirements. Fiber and Link Conditions: Dispersion, attenuation, and OSNR affect the effective sensitivity.

Practical Considerations

Sensitivity is often measured using BER testing with known data patterns or Q-factor modeling for high-speed links. In analog optical systems, sensitivity may be defined by signal-to-noise and distortion ratio (SINAD) thresholds. Designers often use rules of thumb and simulation models to estimate sensitivity during transceiver design.

In summary, common optical receiver sensitivities range from -28 dBm for low-speed, single-mode systems to around -10 dBm for high-speed or free-space links, with exact values depending on system design, BER requirements, and environmental conditions.

Article Content

Receiver Sensitivity

Receiver sensitivity is one of the most widely used specifications of optical receivers in fiber-optic systems. It is defined as the minimum signal optical power level required at the receiver to achieve a

Sensitivity (electronics)

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Sensitivity in a receiver, such a radio receiver, indicates its capability to extract information from a weak signal, quantified as the lowest signal level that can be useful. It is mathematically defined as the minimum input signal required to produce a specified signal-to-noise S/N ratio at the output port of the receiver and is defined as the mean noise power at the input port of the receiver times the minimum required signal-to-noise ratio at the output of the receiver:

Receiver Sensitivity

Receiver sensitivity refers to the minimum input optical power required by the receiver to achieve a specified bit error rate (BER). A larger receiver sensitivity indicates poorer receiver performance.

Minimum Receiver Power vs. Receiver Sensitivity: A Guide to Optical ...

Receiver sensitivity describes the actual tested performance of the receiver under specific controlled laboratory conditions, representing the theoretical limit without additional interference.

HFAN-03.0.0: Accurately Estimating Optical Receiver Sensitivity

In optical communication systems, sensitivity is a measure of how weak an input signal can get before the bit-error ratio (BER) exceeds some specified number. The standards body governing the

Mastering Receiver Sensitivity in Optical Communications

Receiver sensitivity is a critical parameter in optical communication systems, determining the minimum optical power required to achieve a specified bit error rate (BER) or signal-to-noise ratio

HFAN-03.0.2: Optical Receiver Performance Evaluation

In an optical transmission system, one essential parameter in determining the system power budget is the optical receiver sensitivity, which is defined as the minimum average optical power for a given bit

Optical Receiver Sensitivity

The receiver sensitivity is then defined as the minimum average received power required by the receiver to operate at a BER of 10-9. Since depends on the BER, let us begin by calculating the BER.

Optical Module-Receiver Sensitivity

The receiver sensitivity does not include power penalties associated with dispersion, or back reflections from the optical path; these effects are specified separately in the allocation of maximum optical path

Receiver Sensitivity Explained: Testing & Performance Guide

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Understand receiver sensitivity in optical transceivers. Learn about sensitivity testing, performance metrics, and factors affecting receiver quality.

HFAN-03.0.2: Optical Receiver Performance Evaluation

This application note provides an in-depth analysis of the complete receiver optical sensitivity and the potential power penalties related to the accumulation of random noise and inter-symbol interference

Optical Receiver

An optical receiver usually consists of a photodetector and an electrical circuit for transimpedance amplification and signal manipulation. Important parameters of an optical receiver include

What Should You Know About Receiver Sensitivity

Receiver sensitivity shows the lowest signal a device can detect. Learn how it impacts connection quality and what values mean for your device''s performance.

Minimum Receiver Power vs. Receiver Sensitivity: A Guide to Optical ...

Learn the key differences between Minimum Receiver Power and Receiver Sensitivity in optical modules. Discover why using Minimum Receiver Power ensures reliable fiber optic link

Optical Receiver Sensitivity: Measurement and Comparison Guide

Learn how to measure and compare the optical receiver sensitivity for different modulation formats and bit rates in fiber optic networks using various methods, tools, techniques, and metrics.

The FOA Reference For Fiber Optics

Typically both transmitters and receivers have receptacles for fiber optic connectors, so measuring the power of a transmitter is done by attaching a test cable to the source and measuring the power at the

Receiver Performance

Receiver Sensitivity Receiver sensitivity, the traditional measure of receiver performance, is defined as the minimum received optical signal power at a specific BER (e.g., 10−9) 4 in the back-to-back

Estimation of Optical Receiver Sensitivity in HFC Network

Sensitivity can be expressed as average power (PAVG) in dBm or as optical modulation amplitude (OMA) in WP-P (peek-to-peek). Each gives a figure of merit for the receiver. The sensitivity is the

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Related Video Reference

This video was associated with the source search result. Verify technical details against current product documentation and project requirements.

Contact Us

Continue your research online:

Website: https://cjcconsultants.co.za
Technical inquiry: https://cjcconsultants.co.za/contact.html

This document is for preliminary research. Verify specifications against current standards, product documentation and project requirements.

© 2026 CJC FIBRE CONSULTANTS - All rights reserved